




BASE CABINET ASSEMBLY INSTRUCTION

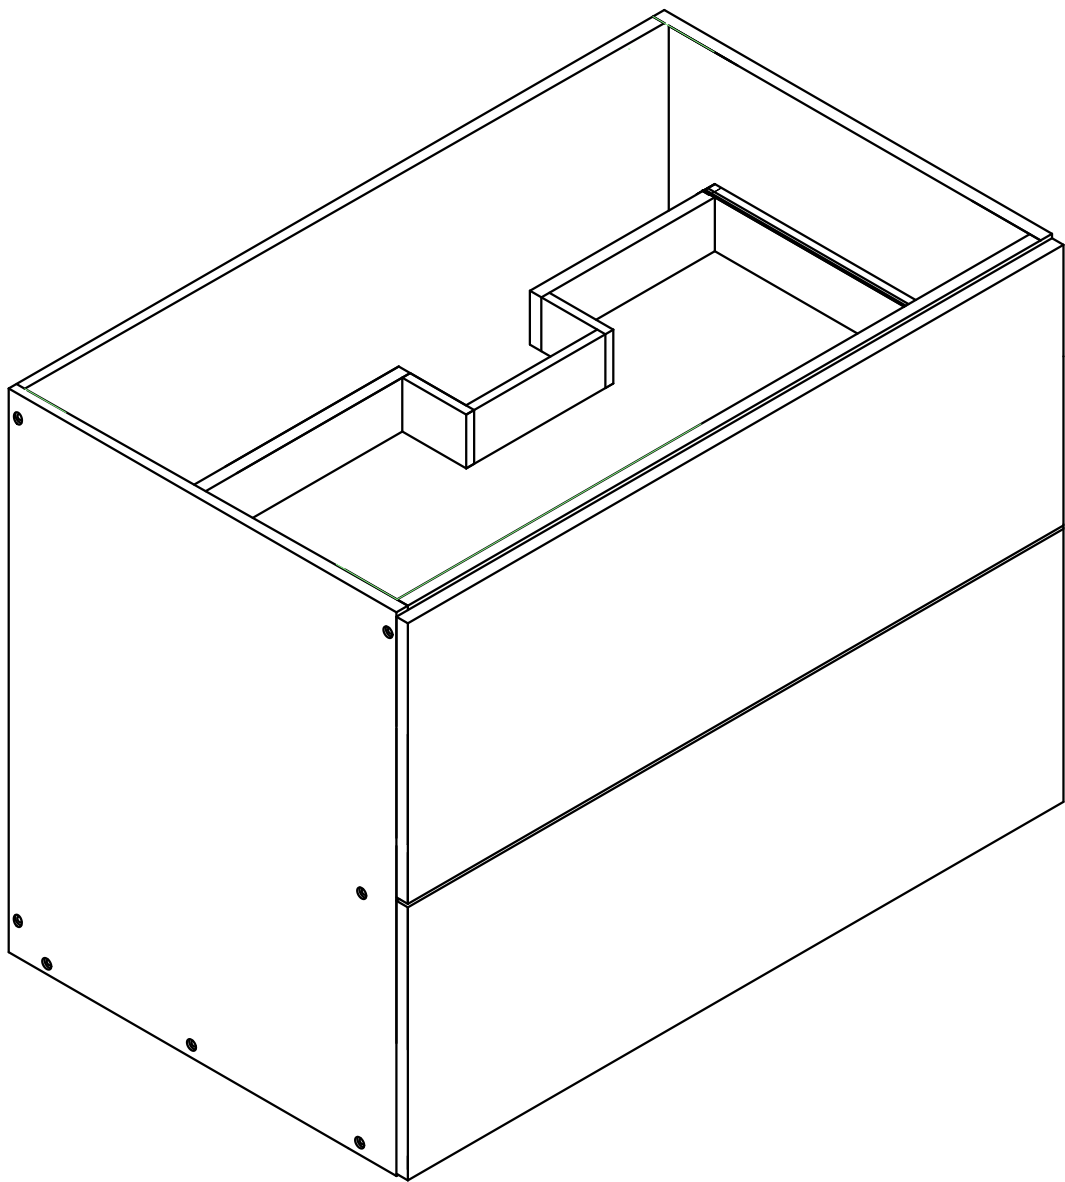


FVDB24
FVDB30
FVDB36

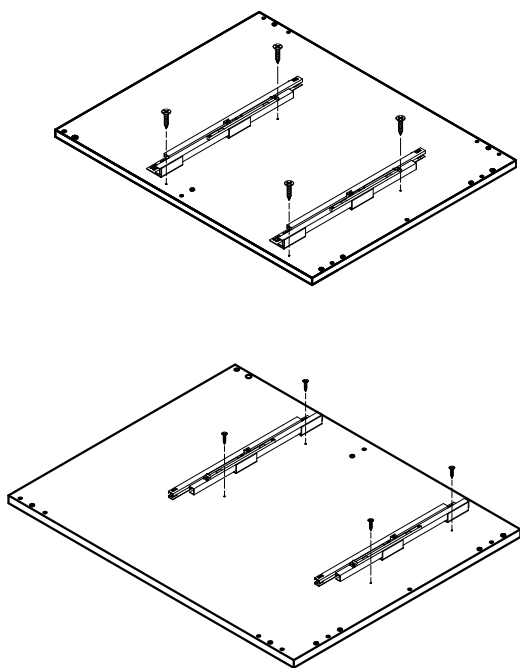

Step-1

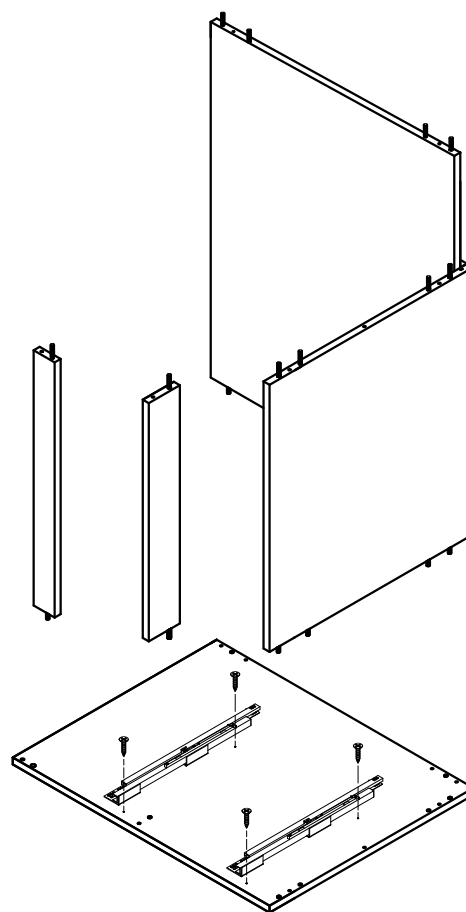


Step-2

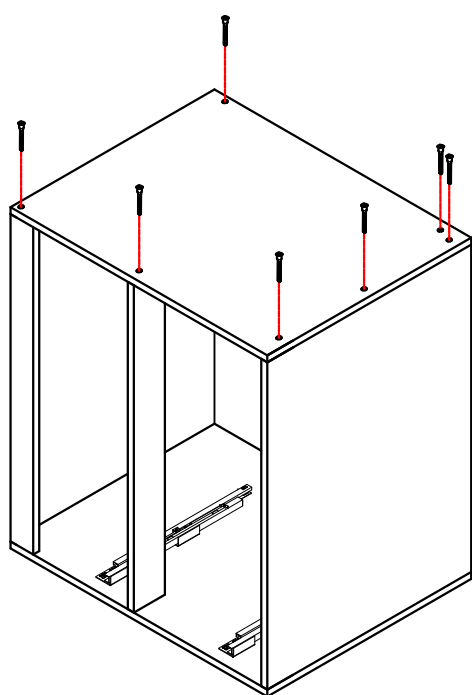

The other side panel is also assembled with the screw

Step-3

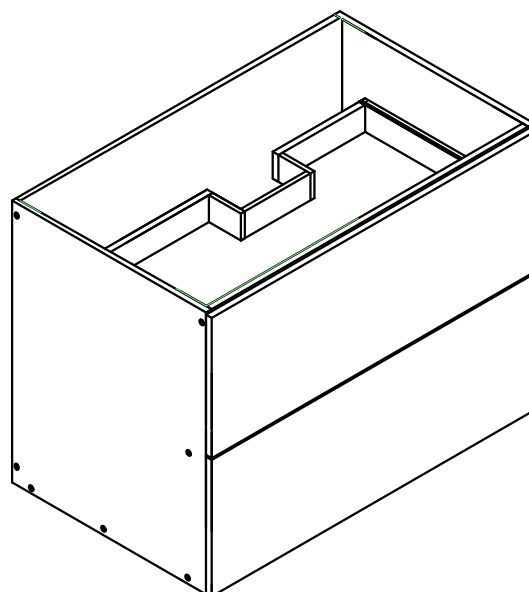

Step-4

C:\Users\Administrator\Documents\Work\1688851759346629\CacheImage\2023-08-01\16917174338610(1).png

C:\Users\Administrator\Documents\Work\1688851759346629\CacheImage\2023-08-01\16917174338610(1).png

